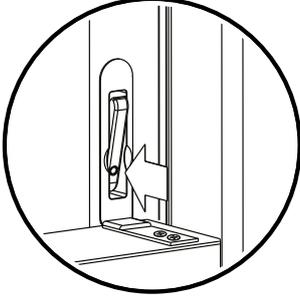
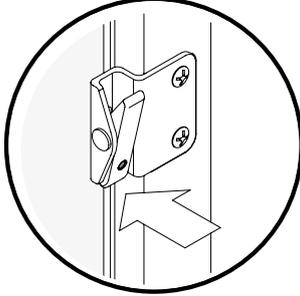
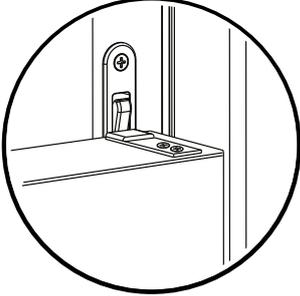
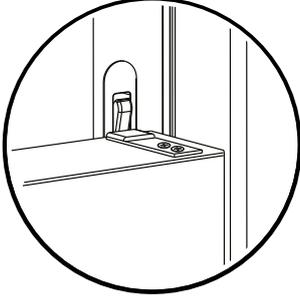
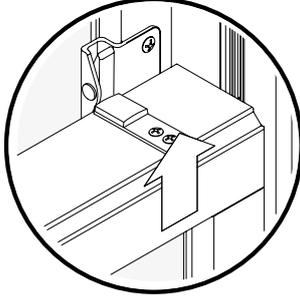
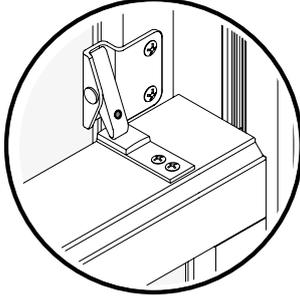
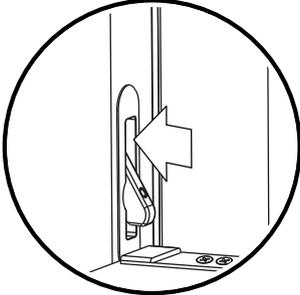
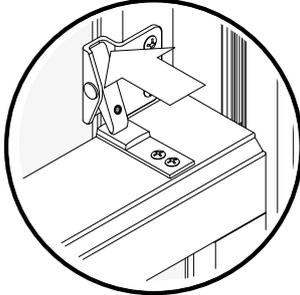


To Disengage Window Opening Control Device

	Face Fix	Side Fix	Retrofit	
1				Disengage window opening control device.
2				Raise bottom sash.
3				Lower bottom sash. Opening control device resets.


To Manually Re-engage Window Opening Control Device

1				Push top to re-engage window opening control device.
----------	---	---	--	--


- Devices should restrict the opening to 100mm or less.
- Check that the Devices have automatically reset after any operation.
- Teach children over 5 years old how to operate the release mechanism in case of an emergency.
- Check that the Devices operate correctly on a monthly basis and clean with a damp cloth.

Device Installation


Face Fix

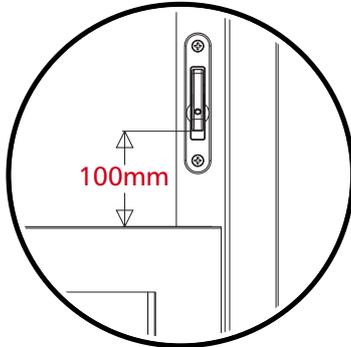

Side Fix

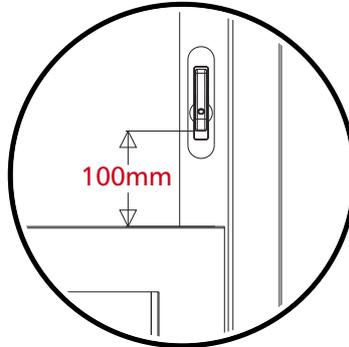

Retrofit




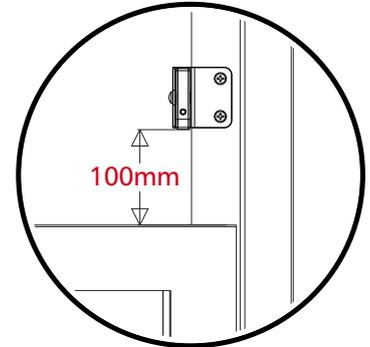


Devices are supplied in pairs and both must be fitted to ensure window is safely secured. One device is fitted to each side of the top sash.

To Fit:


- Important! Close the sashes fully before fitting.
- Fit device to stiles of top sash.
- Ensure a maximum of 100mm gap between top of the lower sash meeting rail and bottom of device restrictor arm as shown above.

Strike Plates

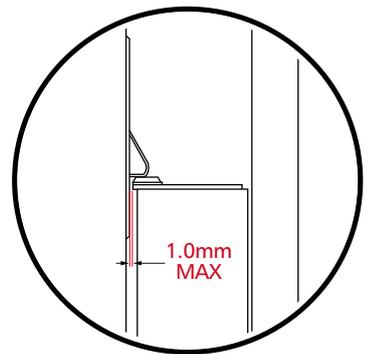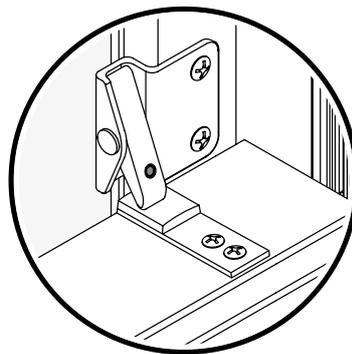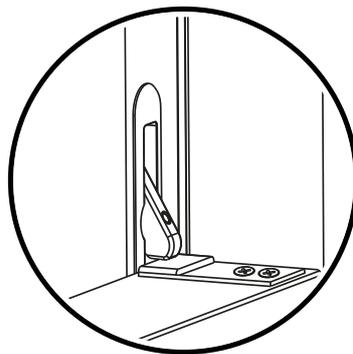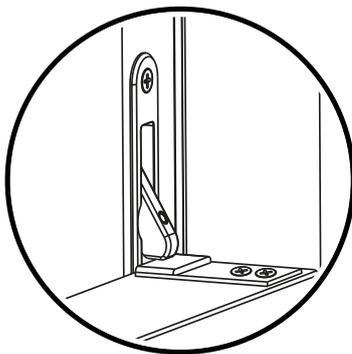

Timber Strike Plate shown

Supplied with two types of strike plate.

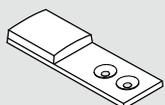

Strike Plate for timber windows



Strike Plate for PVCu Windows (Self Adhesive)

Fit appropriate strike plates to top of bottom sash rail. To ensure correct function of device, position strike plate no further than 1mm from device face plate. After installation, check correct function of devices by following operating instructions overleaf.