



# Locking Ventlock

## Installation Instructions


The Locking Ventlock is easily fitted. Please read the instructions carefully before installation. We recommend fitting two Locking Ventlock per sash.

### Parts List


**A** 1 x Locking Ventlock

**B** 1 x Strike Plate


**C** 1 x Key

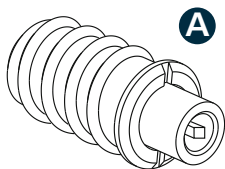

**B**

 


**C**

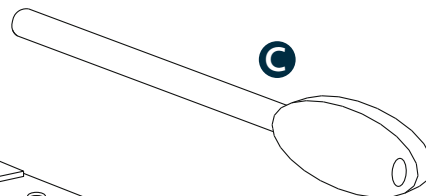


**Important:** Consideration should be given before fitting to Egress windows. Locking Ventlock projects 9mm when fully out. This device must be fitted in a position that allows no more than a 100mm restricted opening. Ensure the sash is completely closed and locked before starting the installation.

### Installation

1

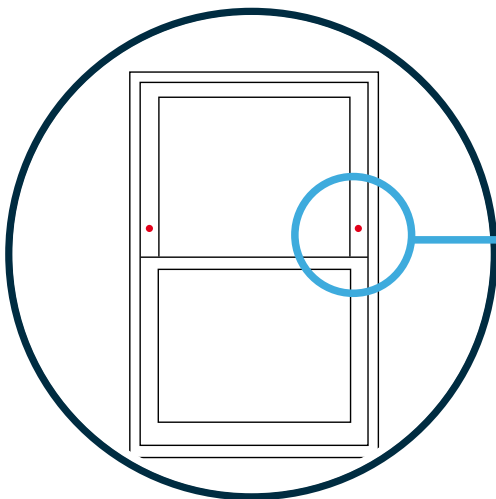

2

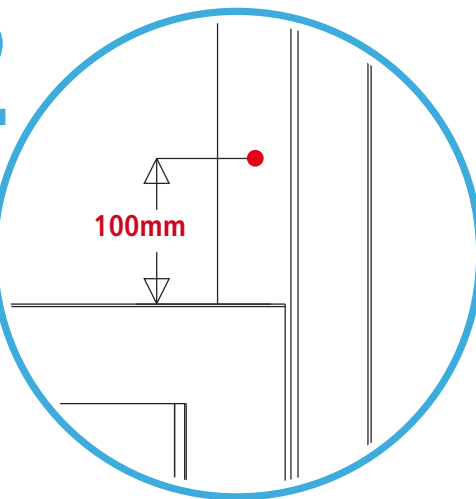


**Important!**

Close and lock sash before starting installation.  
Measure 100mm up from top of bottom sash and mark window frame as shown above.

Drill a 15mm diameter hole 30mm deep into the top sash as shown above.




# 3

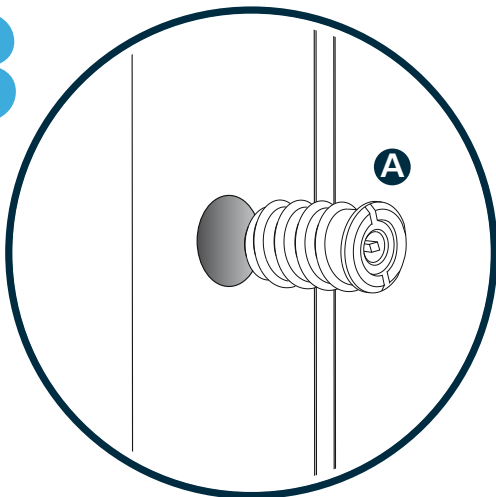

De-activate Locking Ventlock **(A)** using the Key **(C)** provided. Screw the Locking Ventlock **(A)** into the hole using a large flat bladed screwdriver.

# 4

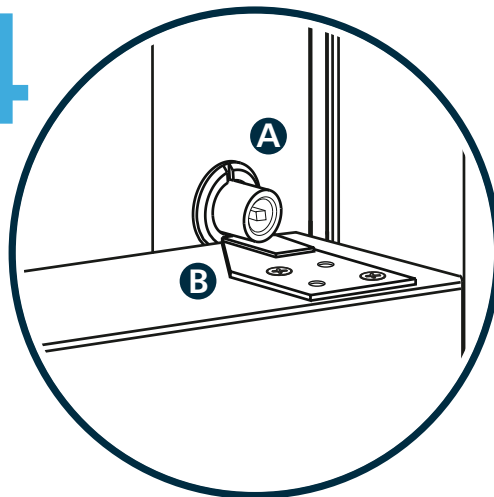


Activate Locking Ventlock **(A)** using the Key **(C)** provided. Lower the sash and install the Strike Plate **(B)**.

## Operation


Verify device operates correctly and window opening cannot exceed 100mm.



De-activate Locking Ventlock **(A)** using the Key **(C)** provided.

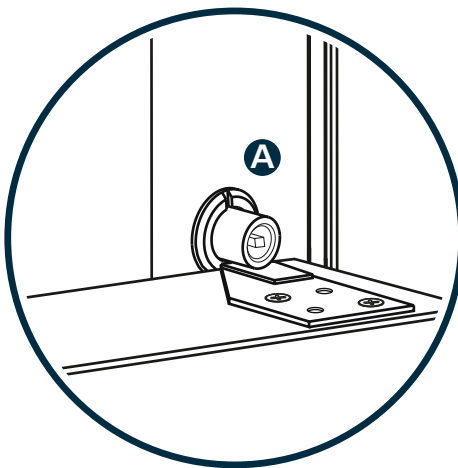

Activate Locking Ventlock **(A)** using the Key **(C)** provided.

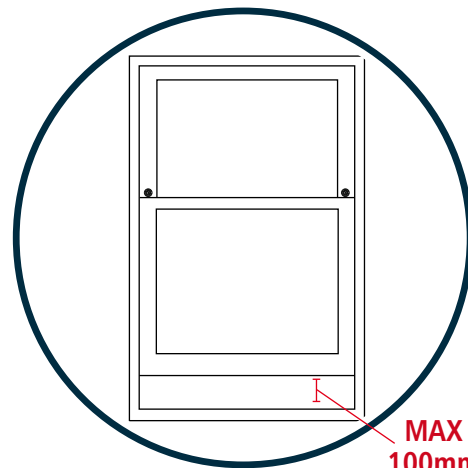

The window opening cannot exceed 100mm.

Clean the Locking Ventlock with a damp cloth. On a regular basis, ensure the device operates correctly. Consideration should be given before fitting to Egress windows.