




# Cambridge/Meakins Sash Opener®

## PARTS LIST

2 LIGHT HANDLES  
2 DARK HANDLES  
2 PULLEYS  
2 KNOT HANDLES  
BODY  
RACK  
CORD

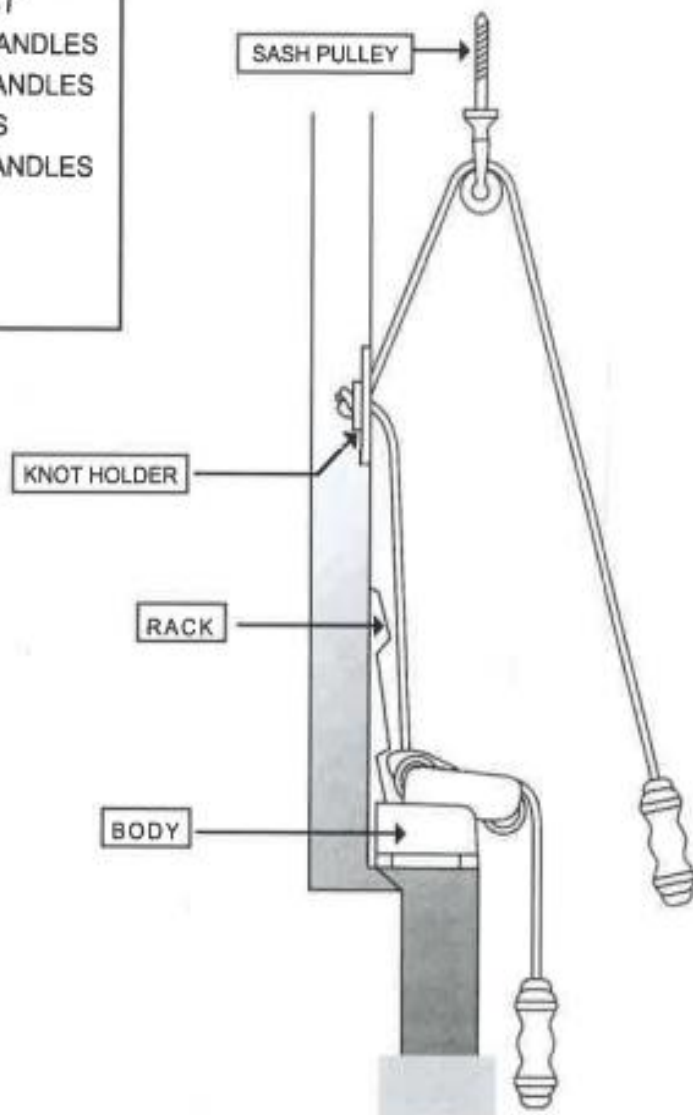

THE CAMBRIDGE FASTENER OPERATE THE TOP SASH

## FITTING INSTRUCTIONS:

- 1) OFFER THE BODY AND RACK TO THE TOP RIGHT OF THE MEETING RAIL OF THE BOTTOM SASH.
- 2) MARK AND FIX ACCORDINGLY:
- 3) POSITION THE BODY ON THE TOP OF THE MEETING RAIL.
- 4) POSITION THE RACK ON THE FACE OF THE OPENING SASH.
- 5) FEED THE CORD UP TO AND THROUGH THE ROLLERS IN THE BODY, CONTINUE UP TO THE KNOT HOLDER WHICH SHOULD BE FIXED APPROXIMATELY HALF WAY UP THE FACE OF THE OPENING SASH. THE KNOT HOLDER AND KNOT HOLDER AND KNOT SHOULD BE FITTED WITH THE SURFACE OF THE TIMBER
- 6) THE KNOTTED CORD SHOULD THEN CONTINUE UP TO THE SASH PULLEY WHICH IS FIXED TO THE HEAD OF THE WINDOW FRAME AND THEN DOWN TO THE OPERATING POSITION
- 7) ATTACH THE 2 HANDLES.
- 8) FIT SECOND KNOT HOLDER, SASH PULLEY, CORD AND HANDLES TO THE LEFT SIDE OF WINDOW.

N.B: WHEN THE WINDOW IS SHUT, THE CORD SHOULD BE TAUT.

THE ACTION OF THE FASTENER IS BY PULLING EITHER THE 'UP' CORD PULLS TO THE LEFT AND RIGHT OF THE WINDOW TOGETHER OR ALTERNATIVELY THE PAIR OF 'DOWN' CORD PULLS. THE TOP SASH CAN BE LOWERED TO ENGAGE THE FIRST TOOTH IN THE RACK TO RAISE THE SASH IN A VENTED POSITION.