




Meeting Rail Interlock

Installation Instructions

The Meeting Rail Interlock is fitted to Timber Sash Windows. Please read the instructions carefully before installation. Two Meeting Rail Interlock's sections required per sash window.



Parts List

A 1 x Meeting Rail Interlock

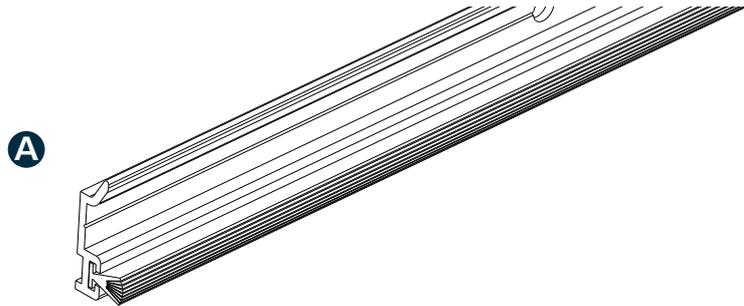

Installation


1

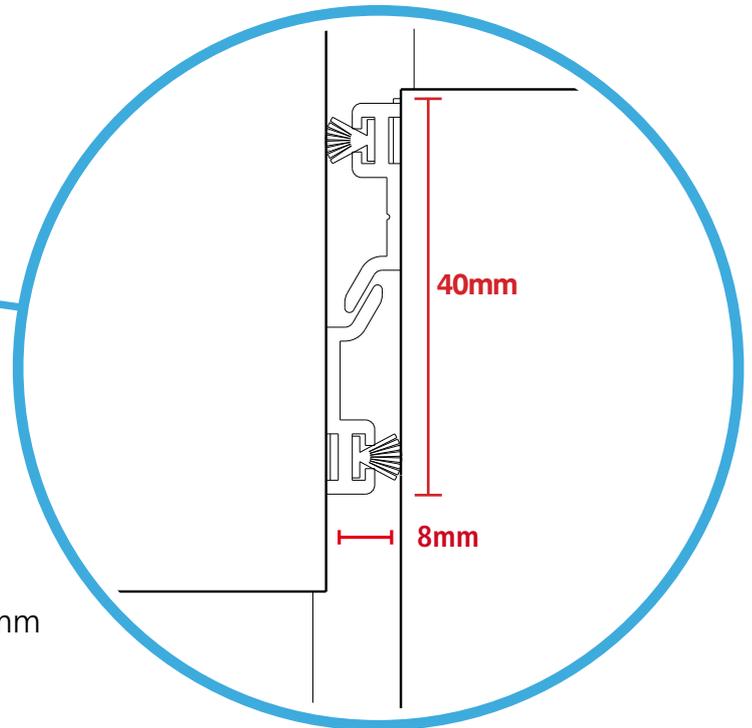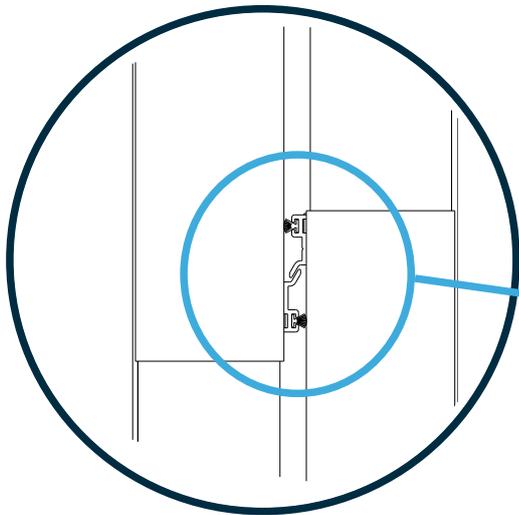

Important!

Meeting Rail Interlock requires an 8mm gap between the sashes.

2

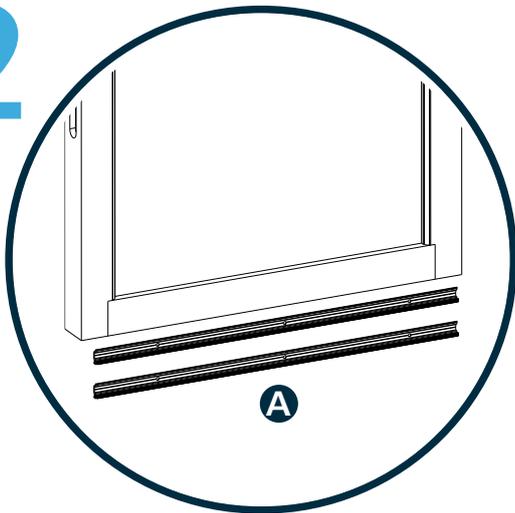


Measure the distance between the parting beads on the window and cut two lengths of Meeting Rail Interlock (A) to fit comfortably without touching the parting beads.

3



Attach Meeting Rail Interlock (A) onto the first sash using self drilling screws.

4

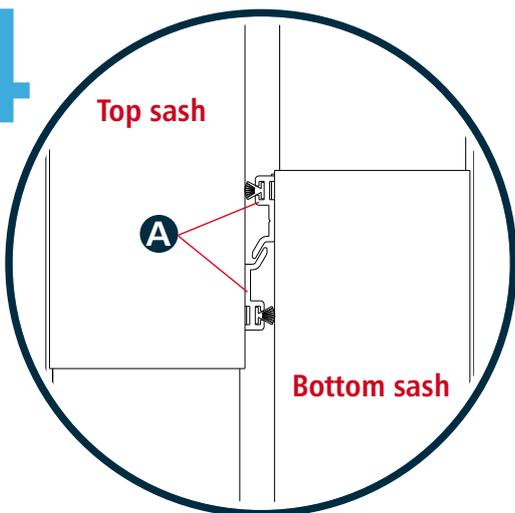

Position and attach the second Meeting Rail Interlock (A) onto the second sash so that the two meeting rails interlock when the window is closed.

Installation is complete. Clean the Meeting Rail Interlock's with a damp cloth.