




## RUBBER FOAM WEATHERSTRIP

### PREPARATION

Install when the temperature is between 40° and 90° F (5°–32°C). For best results, the surface should be clean, dry and grease free.

### INSTALLATION

- 1 Unwind 12" to 18" of tape.
- 2 Starting at one edge or corner, press the adhesive side of the tape firmly in place (leave backing paper on to prevent stretching).
- 3 Continue to apply, cutting off at required lengths with scissors.
- 4 Remove the backing paper.

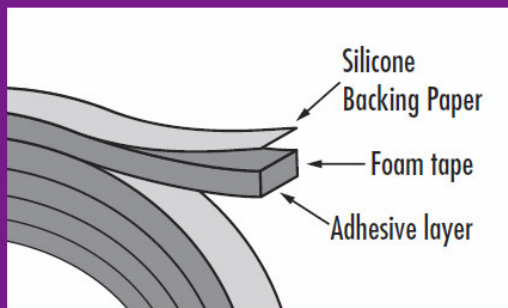

### SASH WINDOWS

- 1 Apply to top of upper window.
- 2 Apply to bottom of lower window.
- 3 Apply across lock rail.
- 4 For extra weathersealing, apply along sides of frame.



### DOORS and HINGED WINDOWS

- 1 Apply to door stop moulding across the top and down the latch side.
- 2 On hinge side, apply to the door frame next to the moulding.

